

## Camera Setting

### IP Camera For Dahua

URL: `http://{0}/cgi-bin/snapshot.cgi?chn={1}&u={2}&p={3}`  
{0} - Static IP With Port  
{1} - Channel  
{2} - UserName  
{3} - Password

### IP Camera For Hikvision

URL: `http://{0}/Streaming/Channels/{1}/picture`  
{0} - Static IP With Port  
{1} - Channel

### If You Check Static IP Work Or Not

<https://www.yougetsignal.com/tools/open-ports/>

### Check IP In URL If Its Work

#### Get Rights Of Camera Setting

Type: Select Type (Dahua/Hikvision)

HostName: Static IP With Port (Example 122.230.410.812:8092)